

The purpose of this Quick Reference Guide is to familiarise the driver with the layout of the vehicle controls.

Vehicle Security

See Security System Handbook.

Sound System

See Sound System Handbook.

Climate Control

See Driver's Handbook, Section 5.

Underbonnet Servicing


See Vehicle Care Handbook, Section 3.

Wheel Changing and Jacking





See Vehicle Care Handbook, Section 4.

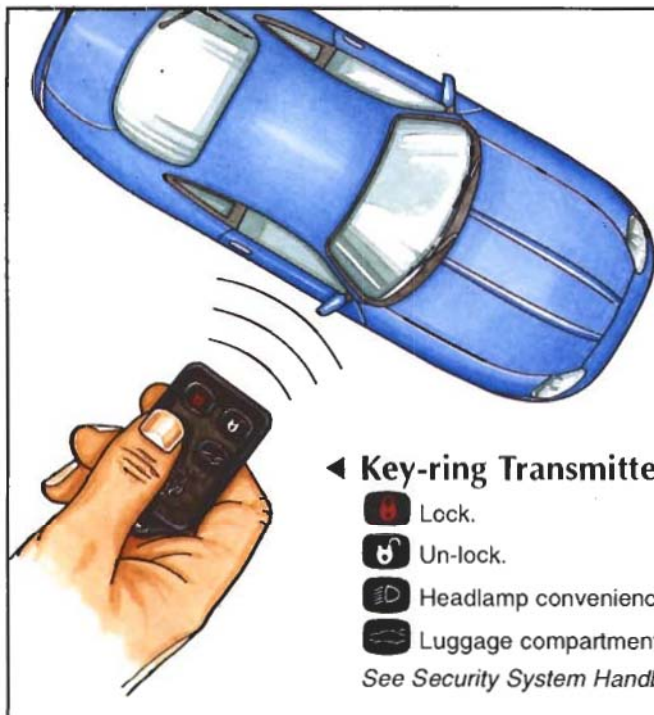QUICK GUIDE






◀ Key-ring Transmitter

-  Lock.
-  Un-lock.
-  Headlamp convenience.
-  Luggage compartment release.


See Security System Handbook

Ignition/Starter ▶ Switch


See page 52.

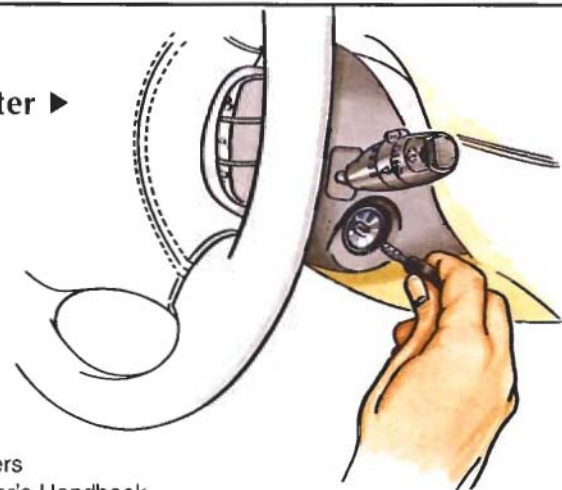

Page numbers
refer to Driver's Handbook

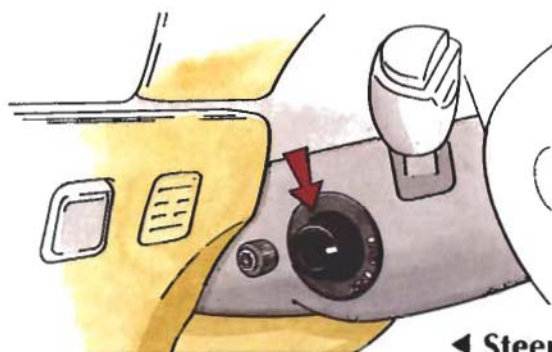

◀ Steering Column

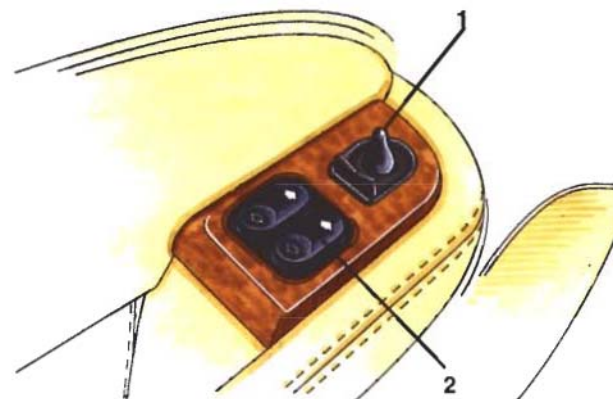

▶ Door Switch Pack

- 1 Door mirror adjustment switch. See page 51.
- 2 Window operation switches. See page 32.




◀ Steering Column Adjustment


See page 50.

Driving Position Memory Buttons

See page 49.

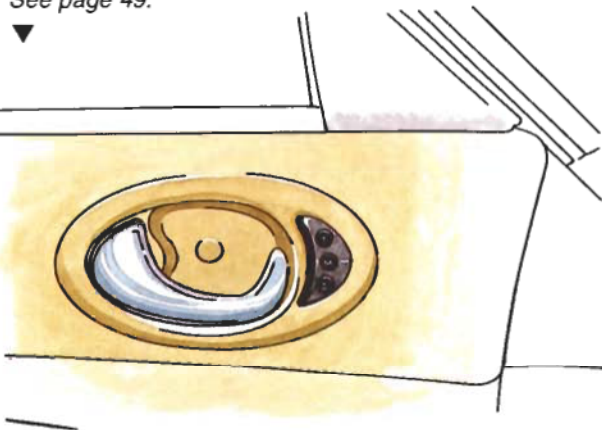

▶ Window operation controls. See page 52.

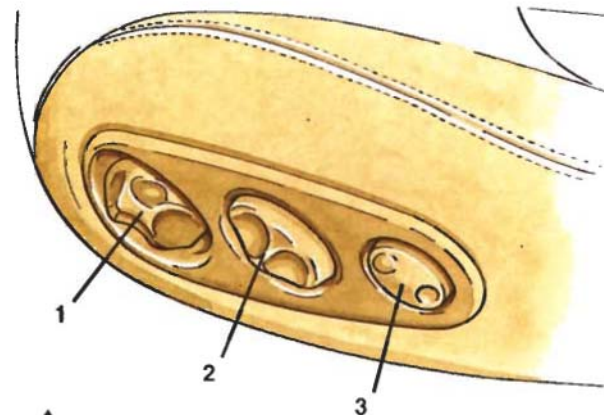

▲ Seat Adjustment Switches See page 47.

- 1 Seat cushion.
- 2 Seat back.
- 3 Lumbar support.

◀ Front Seat Belt Height Adjustment (coupe only)

See page 59.




Front Seat ▶ Back Tilt

See page 48.



Tyre Pressures

See inside the front cover of the Driver's Handbook, and also the tyre recommendation label in the centre console storage compartment.

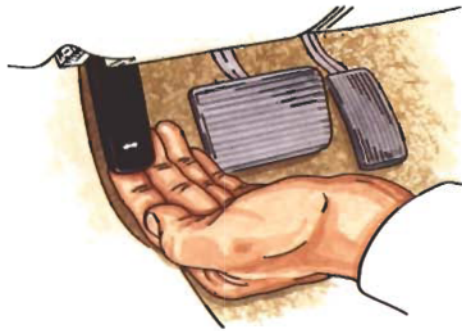


◀ Bonnet Release

See Vehicle Care Handbook page 11

Fuel Filler ▶

See page 55.

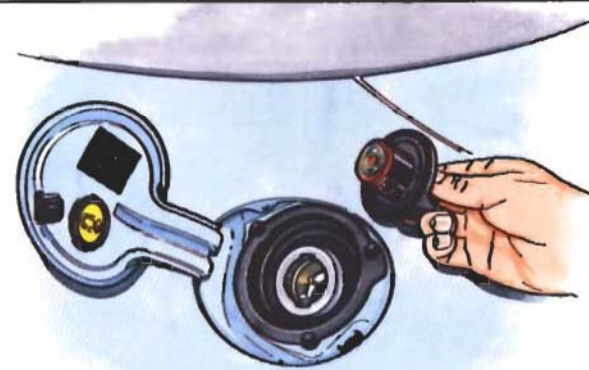

◀ Fuses

See Vehicle Care Handbook page 42.




Bulb Changing ▶


See Vehicle Care Handbook page 63.



◀ Luggage Compartment Layout

- 1 Literature pack which includes the Vehicle Care Handbooks.
- 2 Spare wheel and wheel changing equipment. See Vehicle Care Handbook page 32.
- 3 Battery. See Vehicle Care Handbook page 60.

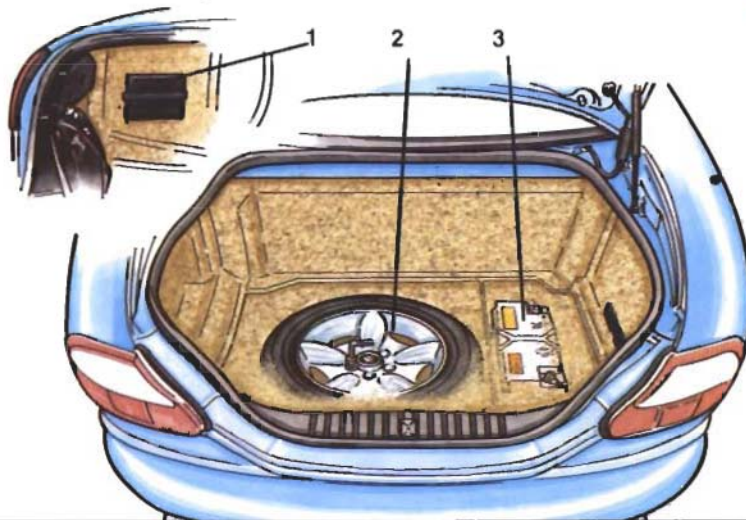


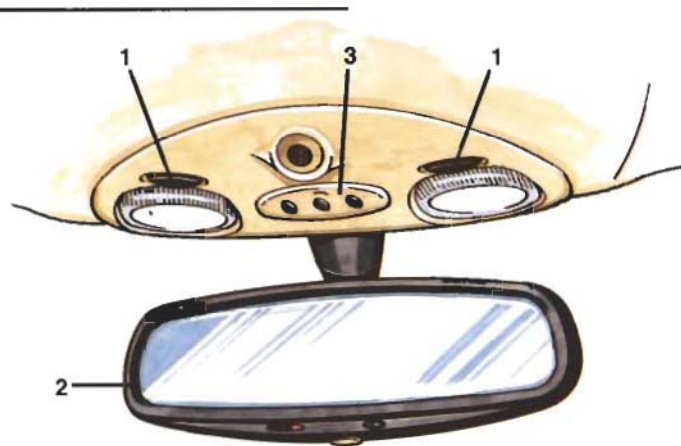

Instruments and Controls

- 1 Map light switch. *See page 38.*
- 2 Interior rear view mirror. *See page 52.*
- 3 Garage door opener switches. *See page 66.*

- 4 Driver's airbag and horns. *See page 61 and 41.*
- 5 Sound system controls. *See Sound System Handbook.*
- 6 Valet switch. *See page 46.*
- 7 Luggage compartment remote release switch. *See page 46.*
- 8 Fuel flap release switch. *See page 55.*
- 9 Exterior lighting, direction indicator and trip cycle switches. *See page 35, 36 and 23.*
- 10 Instrument cluster and warning lights. *See page 12 and 14.*
- 11 Message centre display. *See page 19.*
- 12 Trip computer switches. *See page 24.*
- 13 Windscreen wipers and washers.

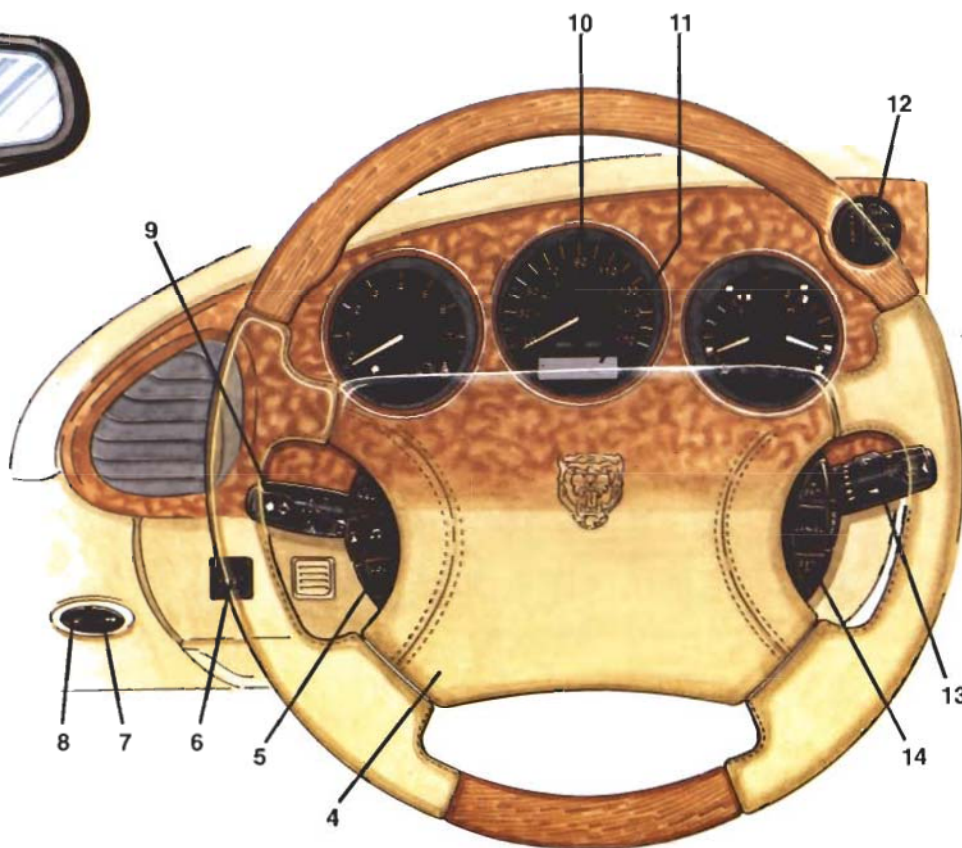

- 13 Windscreen wipers and washers,
headlamp powerwash switches.

See page 40 and 41.

- 14 Cruise control switches.

See page 29.

- 15 Climate control system control panel.

See page 76.

- 16 Hazard warning switch.

See page 37.

- 17 Front seat heater switch.

See page 48.

- 18 Rear fog lamps switch.

See page 37.

- 19 Sport mode switch.

See page 26.

- 20 Cruise control master switch.

See page 29.

- 21 Roof and rear quarter window switch
(convertible only). *See page 88 and 34.*

- 22 Radio, cassette, CD and
telephone control panel.

See Sound System Handbook.

- 23 Front fog lamps switch.

See page 37.

- 24 Automatic stability or traction control switch.

See page 31.

- 25 Heated front screen switch.

See page 78.

- 26 Heated rear screen switch.

See page 78.

Page numbers refer to Driver's Handbook.

For more in-depth information the driver should study the Driver's Handbook, with particular reference to all **WARNINGS** and **Cautions**.

